

Angelcare[®] Deluxe



NAPPY DISPOSAL SYSTEM

Instruction Leaflet

The Angelcare Nappy Disposal System Deluxe with DOUBLE PROTECTION gives you a CONVENIENT and HYGIENIC way to dispose of dirty nappies. Featuring DROP&SEAL, DOUBLE-LOCK and AIR-SEAL™ technology, it is designed to keep bad smells at bay. The foot pedal allows for easy, hands-free disposal, making this a simple-to-use system for a happier, more fragrant home.



Step 1

HOW TO ASSEMBLE YOUR NAPPY BIN

A. Remove the **Top Section** of the nappy bin from the **Base Section** of the nappy bin.



B. Insert the **Base Lever** into the **Slot** of the **Pedal Lever**, located in the **Base Section** of the nappy bin, as shown below. Press down firmly until it **'clicks'**.



C. Remove the **Metal Hinge Pin** from the carton cover of the packaging. Align the **Top and Base Section** of the nappy bin and insert the **Metal Hinge Pin** halfway through the hinge, as shown below.



D. Gently close the nappy bin and push the **Metal Hinge Pin** in completely.



You are now ready to open your first Cassette.

Step 2

HOW TO OPEN THE CASSETTE

A. The first **Cassette** can be found under the **Lid** in the **Top Section** of the nappy bin (see step 3A). Pull the **Tab** on top of the Cassette and remove the **Seal** to access the start of the multi-layer film.



C. Feed the **Film** through the centre of the Cassette.



B. Pull the **Film** gently out of the Cassette.



D. Tie a knot in the end of the **Film** to create the bag. Pull the knot down gently to increase the length of the bag, until the length of the bag is the same as the height of the nappy bin (approx. 50cm/20inches).



You are now ready to install your Cassette into your Nappy Bin.



What is included?

- Top Section of nappy bin
- Base Section of nappy bin (including Pedal Lever)
- Lid (already assembled on top section of nappy bin)
- Base Lever
- Metal Hinge Pin (located on the carton cover on top of the nappy bin in the packaging)
- First (refill) Cassette (located under Lid in Top Section of nappy bin)
- Instruction Leaflet (please keep for future reference)

www.angelcare-uk.co.uk Consumer Helpline: 0845 009 1789 helpline@angelcare-uk.co.uk

www.angelcare-uk.co.uk Consumer Helpline: 0845 009 1789 helpline@angelcare-uk.co.uk

Step 3

HOW TO INSTALL YOUR CASSETTE INTO YOUR NAPPY BIN

A. Remove the **Lid** from the **Top Section** of the nappy bin, by pulling up the **Lip** on the back of the **Lid**, as shown below.



C. Place the **Cassette** gently into the recess in the top section of the nappy bin.



B. Press the **Foot Pedal** down completely and release it slowly until the Internal **Clamp Seal System** opens. Place the **knotted end** of the film through the opening of the **Clamp Seal System**.



D. Insert the back of the **Lid** in the back **Slot** located on the top of the nappy bin, and then press the front of the **Lid** to secure it completely.



You are now ready to use your Nappy Bin.

Step 4

USING YOUR NAPPY BIN

A. Press the **Foot Pedal** down completely to open the **Lid**. Place the nappy inside the opening at the top of the nappy bin. The **Clamp Seal System** will remain closed during this operation, keeping bad smells sealed inside.



C. For larger nappies (size 5 and above) it may be required to press down and then slowly release the **Pedal** until both the **Lid** and **Clamp Seal System** are open at the same time. Hold the pedal in this position and gently push the nappy through the open **Clamp Seal System** until it disappears in the multi-layer bag. Release the pedal to close the **Clamp Seal System** and **Lid**.



B. Release **Foot Pedal**. The **Clamp Seal System** will open for a short period to allow the nappy to drop inside the multi-layer bag automatically. The **Lid** closes simultaneously.

TROUBLE SHOOTING GUIDE

Q. My nappy bin lid does not close after I have inserted a nappy.

A. It is possible that the nappy is not correctly pushed through the clamp seal system. Press the foot pedal once more. If the lid still remains open it may be time to empty your nappy bin.

Q. How do I know when the cassette will run out?

A. A red line will appear on the multi layer film. This indicates that you probably have enough film left to fill the nappy bin once more.

Q. Where can I buy Angelcare refill cassettes?

A. Angelcare refill cassettes are available from Mothercare, Amazon, Argos, Boots, Tesco Toys R Us, Superdrug, Morrisons, Kiddicare and selected independent baby stores or visit www.angelcare-refills.co.uk for the best online deals, including Free Delivery!



Step 5

EMPTYING YOUR NAPPY BIN

A. When the nappy bin is full, open the nappy bin by pushing the button on the front to gain access to the bag inside the nappy bin.



C. Tie a knot to seal the bag containing the nappies (a). Take the full bag out of the nappy bin and dispose of it. Tie a knot in the end of the film to create a new bag (b).



B. Cut the film using the Childproof Safety Cutter inside the nappy bin.



D. Gently pull the film until the bag is long enough to reach the bottom of the nappy bin.



You are now ready to start using your Nappy Bin again!